

RADICA

Pocket Poker



MODEL 75005

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 82389720 Rev.B

Play the classic game of Draw Poker, or try playing deuces wild for some really exciting poker action! Try for 4-of-a-Kind, a Straight Flush, or even a Royal Flush.

The type of winning hands and points awarded are listed on the back of game.

TO PLAY



E 1

SOUND button - Press to turn the sound on/off.

ON/DEAL/DRAW button

- Press to turn on the game (The game turns itself off after sitting idle for two minutes.)
- Press to **DEAL** the cards. 5 points are automatically bet for you.
- After you **HOLD** the cards you want to keep, press this button again to **DRAW** your new cards.

HAND SCORE button - When "GAME OVER" is flashing, press to change the screen between your current score and last hand. Your score is automatically calculated after each hand.

After the initial deal, press the HOLD button below each card you want to keep. Press HOLD again if you wish to delete the hold on that card.

When "Game Over" is flashing, you may use the switch on the back to change between Draw Poker and Deuces Poker.

Note: If the player's point total gets down to zero, 100 points is automatically added to that total. Maximum Score: 99,995.

Deuces Poker - A switch is located at the back for switching between Draw Poker and Deuces Poker.

Note: Be sure to leave the switch in the 'Off' position a few seconds before switching games to allow the electronics to reset.

In Deuces Poker, card "2" is treated as the "multi-purpose" card. It helps to complete the winning hand in which the "2" will maximize the payout.

BATTERY INSTALLATION

This game is powered by one "AA" (LR6) battery.

1. Remove cover, press down and slide as shown.
2. Find correct battery polarity (+/-) and diagrams inside compartment.
3. Insert one AA battery (we recommend alkaline) as indicated inside the battery compartment.
4. Replace the battery compartment cover.



ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or exploded if recharged, disassembled or heated.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through reusing or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to reuse or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some

of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

6 MONTH PRODUCT WARRANTY (This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed in the U.K. by:
RADICA U.K. Ltd.
The Old Stables, Munns Farm,
Cole Green, Hertfordshire,
SG14 2NL, England



PLEASE RECYCLE



RADICA:®

POCKET POKER IS A REGISTERED
TRADEMARK OF RADICA GAMES LTD.
© 1997, 2004 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED