



Pocket Slot 7



MODEL 75007
For 1 Player / Ages 8 and up
INSTRUCTION MANUAL

P/N 82389920 Rev.B

Place bets on one, two, or three lines, spin the reels and see how lucky you are!

Now it's time to test your luck!

The type of winning jackpots and points awarded are listed on the back of game.

TO PLAY



SOUND button - Press to turn the sound on/off.

ON/SPIN/BET button - Press to turn on the game (The game turns itself off after sitting idle for one minute.)

Press to place your bet (1,2, or 3 lines). The length of time the button is held down determines how much is bet.

Points are immediately subtracted when betting. Your score is automatically calculated after each hand.

The **MAX BET button** can be pressed to automatically bet on all three lines. The reels will spin after the bets are placed.

Note: If the player's point total gets down to zero, 400 points is automatically added to that total. Maximum Score: 29,999.

BATTERY INSTALLATION

This game is powered by one "AA" (LR6) battery.

1. Remove cover, press down and slide as shown.
2. Find correct battery polarity (+/ -) and diagrams inside compartment.
3. Insert one AA battery (we recommend alkaline) as indicated inside the battery compartment.
4. Replace the battery compartment cover.



ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.

- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed by:
RADICA U.K. Ltd.
 The Old Stables, Munns Farm,
 Cole Green, Hertfordshire,
 SG14 2NL, England



PLEASE RECYCLE



RADICA:®

POCKET SLOT IS A REGISTERED TRADEMARK OF RADICA GAMES LTD.
 ©1997, 2004 RADICA GAMES LTD.
 PRODUCT SHAPE™
 ALL RIGHTS RESERVED