



**BIG SCREEN  
Poker**



**I6003**

For 1 Player / Ages 8 and up

## INSTRUCTION MANUAL

P/N 82398400 Rev.D

Get ready - it's Poker at its best! LoBall, Deuces, and Draw Poker all in one game!

### BUTTON FUNCTIONS:



#### On/Deal/Draw

- Press to Turn On the game. The game turns itself off after sitting idle for one minute.
- Press and hold down this button for a BET of 10, 20, 30, 40, or 50 points. The cards are dealt when the button is released.
- After holding the cards you want to keep, press this button again to DRAW your replacement cards.

#### Hold

Press the Hold button below each card you want to keep. Press again to delete the hold on that card.

#### Hold/Game

Press and hold this button while "Game Over" is flashing to switch between Draw, LoBall, and Deuces Poker. The game mode is shown in the lower right corner of the display.

#### Ride

After winning a hand, up to 500 points are stored in the "Let it Ride"(LIR) area of the display. To bet this entire amount press this button.

#### Max Bet

This button can be pressed to automatically bet 50 points.

#### Player

Press and hold this button while "Game Over" is flashing on the screen to select a one player or two player game.

**E**

#### Sound

Press to turn sound on and off.

#### Score

Your SCORE is automatically calculated after each hand and when betting. "Win" will flash and a winning melody will play for each successful hand. The scoring table (based on a 50 point bet) is printed on the back of the game.

**Auto Back Light** – Big Screen Poker is equipped with an auto-backlight feature. This allows you to play your favorite game in the dark! After you turn your game on, or at anytime while you are playing your game, if your lighting conditions become dim, your screen will automatically illuminate! If you set the game down, the game goes to sleep, and the light will also automatically turn off.

### HOW TO PLAY:

- Turn on the game by pressing the ON/DEAL/DRAW button.
- Select the game you wish to play by pressing and holding the HOLD/GAME button while "Game Over" is flashing.
- Press the ON/DEAL/DRAW or MAX BET buttons to deal your first set of cards.
- Select the cards you wish to hold by using the HOLD buttons.
- Press ON/DEAL/DRAW to receive your replacement cards.
- When playing Deuces, the "2" card (or "deuce") of any suit is considered wild and can assume the number and suit of any other card.
- In LoBall, the lowest possible hands are winners and Aces are always low. A single pair or a card above 8 automatically loses, except with 2 pairs.
- A bonus of 100 points is awarded for 3 consecutive winning hands.

### BATTERY INSTALLATION:

This game is powered by two (2) AA (LR6) batteries.

- Remove the battery cover: Press a coin down into the slot. Then slide the battery cover off, as shown.
- Insert two AA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door.

**Adult supervision is recommended when changing batteries.**

### CAUTION:

- **As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**
- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **Under an environment with radio frequency interference, the device may malfunction and require user to reset the device.**

## MAINTENANCE:

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

### Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

## 90-DAY LIMITED WARRANTY

**(This product warranty is valid in the United States and Canada only)**

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:  
**RADICA USA Ltd.**  
13628-A Beta Road  
Dallas, TX 75244-4510



### **RADICA®**

**BIG SCREEN POKER** IS A REGISTERED TRADEMARK OF  
RADICA GAMES LTD.  
© 2002-2005 RADICA GAMES LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED