


BUTTON FUNCTIONS

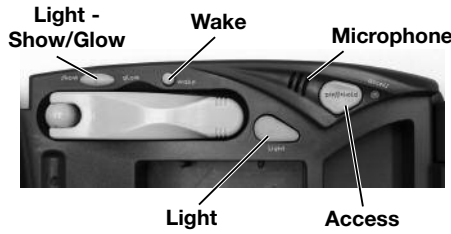

Show – Press the “Light” button while in the Show mode and light your page.

Glow – Press the “Light” button while in the “Glow” mode and UV light will reveal your secrets.

NOTE: The UV light will automatically shut off after 1 minute OR if raised above a 55 degree angle.

Wake: Press this button to wake up the voice command functions (SEE USING VOICE COMMANDS) after they have timed out.

Access Button: Press and hold the access button to enter and open your journal.

SET UP

1. RECORDING YOUR PASSWORD

After installing the batteries, you will be prompted to “Please enter your password”. Wait for the green “Access” light to turn ON, then say your chosen password in the microphone. Your password can be any word of your choice, such as “cat”, “popcorn” or “flower”.

NOTE: If you do not wait until the green light is on, Password Journal will not “hear” your password and will prompt you to speak again: “Oops...please begin again”

Password Journal will prompt you to repeat your new password again: “Please repeat your password”. If you have spoken your password correctly, it will be accepted: “Password recorded”.

Password Journal will open automatically once password setup is success.

HINT: Be sure to speak clearly and say your password the EXACT same way each time! When recording your password, make sure you are in a quiet place. If the Password Journal does not accept your password after speaking it clearly, try whispering the password.

You may want to write down your password in case you forget it - but be sure to write it in a safe place or it won't be a secret anymore!

If you do not want to set password, ignore voice instructions until finished. Access button will automatically open journal.

2. SETTING THE TIME

Once you have recorded your password and opened your journal, you'll need to set the correct time and date. Please enter the time one number at a time.

Your journal will ask you “Do you want to set your time”, to which you should reply “Yes” or “No”. If you answer “No”, your journal will then prompt you to set the date (see SETTING THE DATE).

If you answered “Yes”, your journal will say “Please enter one number at a time, wait for the beep”. You will need to set the time as a 4 digit sequence, so 7am would be entered as 0700: “0” (beep) “7” (beep) “0” (beep) “0” (beep). If the time was 1:47pm, you would enter as follows: “0” (beep) “1” (beep) “4” (beep) “7” (beep).

Note: You must say “zero” for “0”.

After entering the 4 digit of time, Password Journal prompts to ask you “Is it AM?”. Say “YES” to set as AM and say “NO” to set as PM. If your journal identifies with what has been said, it will ask you to confirm, for example: “The time is set as 1:47PM. Is it correct?” Answering “YES” will enable you to proceed to setting the date. Remember, speak clearly.

NOTE: If the journal does not understand what you said for the 2nd time, you will hear “See ya later” and your journal will go to sleep. To wake it up and continue to set the clock you will need to press wake button.

3. SETTING THE DATE

Once you have set the time, you'll be prompted to set the date.

Your journal will ask you “Do you want to set the date”, to which you should reply “Yes” or “No”. If you answer “No”, your journal will then prompt you to set your alarm.

Step 1. The journal will ask you the year, so you will hear “What year is it? please enter one number at a time, wait for the beep”. You will then enter the year as individual numbers, again waiting for a beep to sound after each number before you say the next one, for example 2005 would be entered as “2” (beep) “0” (beep) “5” (beep).

Step 2. The journal will ask “What month is it?” You need to speak clearly the name of the month (January - December). Once you have told the journal what month it is, you will then be asked to enter the date: “What day is it? please enter one number at a time, wait for the beep”. This needs to be entered as a 2 digit code and you have to wait for a beep to sound after the first digit before you say the second, for example if the date is the 12th, you would enter “1” (beep) “2”. If the date was the 8th, you would enter “0” (beep) “8”.

If your journal identifies with what has been said, it will ask you to confirm it, for example: “The date is set as August 12 2005. Is this correct?”. If you answer “No”, you will need to begin again. Answering yes will enable you to proceed to setting the alarm.

4. SETTING AN ALARM

Once you have set the date, you'll be prompted to set an alarm.

Your journal will ask you “Do you want to set an alarm”, to which you should reply “Yes” or “No”. If you answer “No”, your journal will then exit the set up mode.

If you answered “Yes”, your journal will ask “Date or Time alarm?”.

a) If you answered “Date”, your journal will ask “What month is it?”. You need to speak clearly the name of the month that you want to set the alarm for (January - December). Once you have told the journal what month you want, you will then be asked to enter the date: “What day is it? please enter one number at a time, wait for the beep”. This needs to be entered as a 2 digit code and you have to wait for a beep to sound after the first digit before you say the second, for example if the date is the 24th, you would enter “2” (beep) “4”. If the date was the 8th, you would enter “0” (beep) “8”.

If your journal understands with what has been said, it will ask you to confirm, for example: “The alarm is set as September 24. Is this correct?”. If you answer “No”, you will need to begin again. Answering yes will exit you from the set up mode.

When the alarm date is reached and the journal is opened on that date, the alarm will sound for 10 seconds or until ‘ACCESS’ is pressed.

b) If you answered “Time”, your journal will say “Please enter one number at a time, wait for the beep”. You will need to set the time as a 4 digit sequence, so 7am would be entered as: “0” (beep) “7” (beep) “0” (beep) “0” (beep) and 3:30pm would be entered as follows: “0” (beep) “3” (beep) “3” (beep) “0” (beep).

Your journal will then verify the 4 digit code it has detected by repeating the time back to you and asking you to confirm, for example “OK. 3:30. Is this correct?”. If you answer “No”, you will need to start the process again. If you answer “Yes” the journal will ask if this is AM or PM. Speak the answer clearly.

If your journal identifies with what has been said, it will ask you to confirm, for example: “The alarm is set as 3:30PM. Is this correct?”. If you answer “No”, you will need to begin again. Answering yes will exit you from the set up mode “OK. Alarm set up complete. Bye.”

Password Journal



18006

Ages 6 and up

INSTRUCTION MANUAL

P/N 823A6110 Rev.D

Keep all your secrets safe with the Password Journal! The cover stays locked until you say your secret password, then locks automatically when you close it. An intruder alarm lets you know how many people have tried to sneak a peek without your permission. Once inside you can activate the show & glow light, alarm, calendar and more simply by talking to Password Journal!

GETTING STARTED

BATTERY INSTALLATION

Adult supervision is recommended when installing batteries.

- Using a screwdriver, loosen the screw until battery compartment door can be removed.
- Insert (3) AAA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.



Reset Button

NOTE: You will have 20 seconds to replace the old batteries before your password and set-up information is lost. Should you lose your password or set-up information, you will need to re-enter them.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage;

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

When alarm time is reached, the alarm will sound for 10 seconds or until 'ACCESS' is pressed.

NOTE: If the journal does not identify with what you have put in for the 2nd time, you will hear "Error" and your journal will exit set up mode. You will need to start again.

Your journal will then exit set up mode: "OK. Set up complete".

NOTE: Be sure to speak clearly and say your password the EXACT same way each time! When recording your password, make sure you are in a quiet place. If the Password Journal does not accept your password after speaking it clearly, try whispering the password.

You may want to write down your password in case you forget it - but be sure to write it in safe place or it won't be a secret anymore!

USING YOUR PASSWORD JOURNAL

1. USING VOICE COMMANDS

Step 1. Press the Wake button to operate any of the journal functions. Once you press the wake button the journal will say "Okay". This is the prompt for you to say...Light, Clock, Calendar, Alarm, or Change.

Step 2. Say one of the following:

LIGHT

- Say "light" to toggle the status of the lamp

Please note: Choose which light source you would like to activate by sliding the button to Show or Glow then speak the word "light".

CLOCK

- Say 'Time' or 'Clock' and the journal will respond by telling you what time it is.

CALENDAR

- Say 'Date' or 'Day' or 'Calendar' and the journal will respond by telling you what date it is.

ALARM

- If an alarm is already set and you say "Alarm" and the journal will respond by telling you the time your alarm sound.
- To turn off your alarm, simply tell your journal "Alarm off" and it will respond with "Alarm off, OK".
- If there is no alarm set, say 'Alarm' to turn off the alarm mode and your journal will say "No alarm set".
- Say "Set alarm" to direct your journal into alarm set up (see SETTING YOUR ALARM).
- If you say "Alarm on" when no alarm is set, the journal will tell you "No alarm set".

CHANGE

You can be more specific with things you would like to change within your journal.

Simply say one of the following:

- CHANGE (if only say "Change", Password Journal can start over the setup procedure.)
- CHANGE TIME
- CHANGE DATE
- SET ALARM
- CHANGE PASSWORD

This will take you to the specific part of set up mode that you have requested. Your journal will confirm your command back to you, for example "CHANGE DATE" and will lead straight into the set up mode for changing the date (see SETTING THE DATE).

2. CHANGING YOUR PASSWORD

From time to time, you may want to change your password (especially if you think someone else knows it!). Open Password Journal using your old password.

SEE CHANGE SECTION ON USING VOICE COMMANDS.

Your password will then ask you "Do you want to change your password?". Simply reply "Yes" or "No". If you answer "No", your journal will then exit the set up mode.

If you answered "Yes", your journal will ask you to record your password "Please enter your password". Wait for the green "Access" light to

turn ON, then say your chosen password in the microphone. Your password can be any word of your choice, such as "cat", "popcorn" or "flower".

NOTE: If you do not wait until the green light is on, Password Journal will not "hear" your password and will prompt you to speak again: "Oops...please begin again".

Password Journal will prompt you to repeat your new password again: "Please repeat your password". If you have spoken your password correctly, it will be accepted: "Password recorded".

3. TURNING ON THE LIGHT

Locate the LIGHT button inside the Password Journal. Press the LIGHT button to turn the light on or off. Choose which light source you would like to activate by sliding the button to either Show or Glow. If the door is closed while the light is still on, the light automatically turn off.

4. USING THE GLOW LIGHT AND PEN

⚠ WARNING: The Glow Light emits UV light. Do not look directly at the light bulb. Using the special Glow Light pen included in your Password Show & Glow write your personal secrets then reveal them with the Glow light. To activate the Glow Light locate the LIGHT button inside the Password Journal. Press the LIGHT button to turn the light on and slide the Show and Glow button to the Glow position.

CAUTION

- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Keep these instructions for future reference as they contain important information.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

6-MONTH LIMITED WARRANTY FOR USA

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 6 months from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 6-month warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

6 MONTH PRODUCT WARRANTY FOR UK

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 01628500303.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

THIS WARRANTY IS IN ADDITION TO YOUR STATUTORY RIGHTS.



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

© 2006 Mattel, Inc. **MADE IN CHINA.** Manufactured for Mattel. All Rights Reserved. RADICA®, GIRL TECH, TECH GIRL®, PASSWORD JOURNAL and associated trademarks and trade dress are owned by Mattel, Inc.

RADICA USA Ltd., 13628-A Beta Road, Dallas, TX 75244-4510. www.radicagames.com Helpline 1.800.803.9611.

Retain this address for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-8697.